

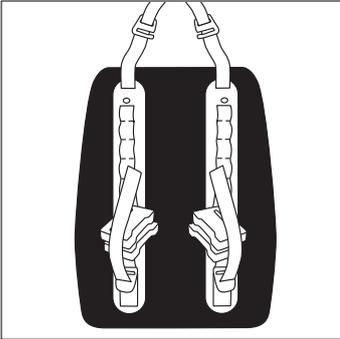


# HANDLEBAR ROLL ATTACHMENT INSTRUCTIONS


**1.**  
First install the holster on your handlebar.

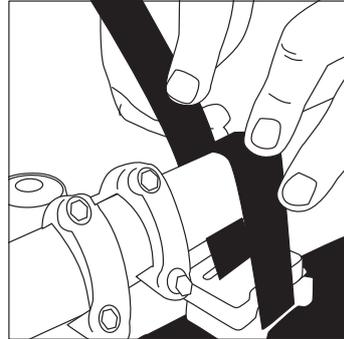


**2 - 3.**  
Based on your needs, place the desired number of spacers through the strap and pass it through the buckle and around the handlebar.

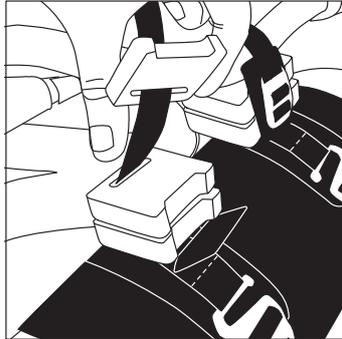


**4.**  
Pass the strap through the second buckle loop to lock.

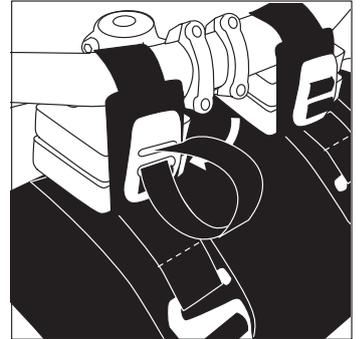


**5.**  
For proper clearance, adjust the position of the EVA spacer.

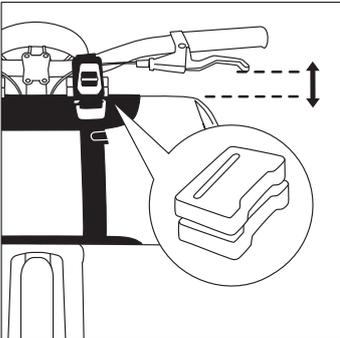


**6.**  
Tighten the holster and pull the strap tightly.

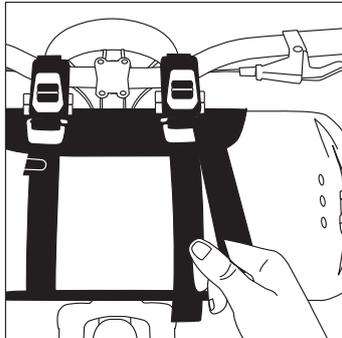


**7.**  
Check the strap length to avoid interference with your wheels.

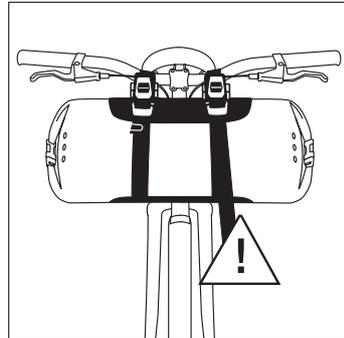


**8.**  
Secure the strap with the plastic buckle to keep it safely in place.

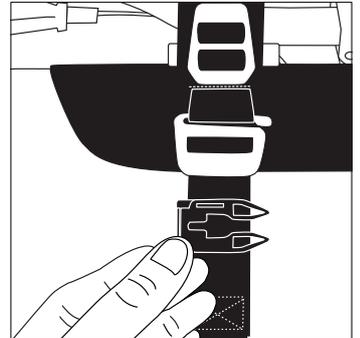



**9.**  
Roll-up the webbing end.

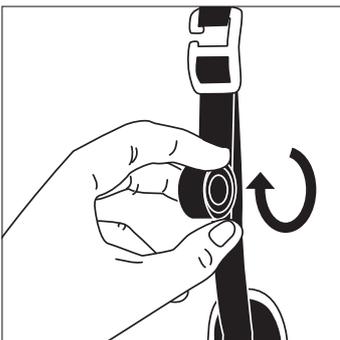


**10.**  
Roll-up the webbing end and fix it with the velcro strap.

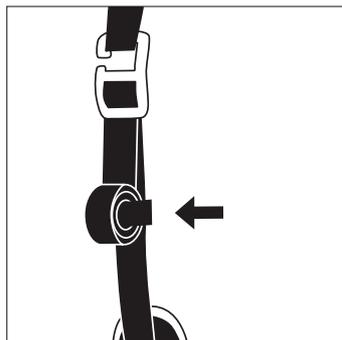

**11 - 12.**  
Use the central strap to secure the bag to the head tube, using extra EVA foam if needed.

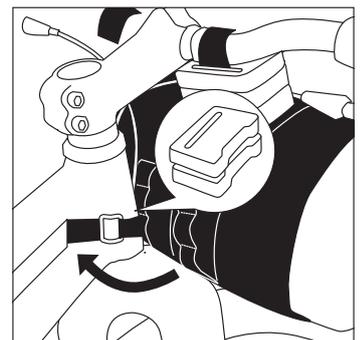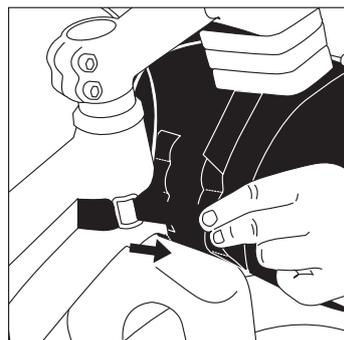

**13.**  
Check if the bag is properly secured before moving.

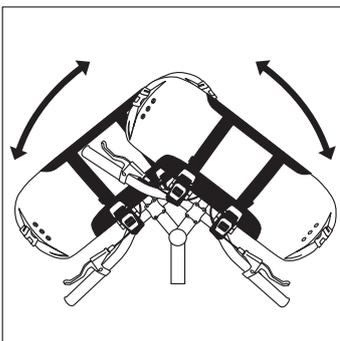

**14.**  
The handlebar roll is now correctly installed.

