



# HANDLEBAR POUCH BAG ATTACHMENT INSTRUCTIONS


**1.**  
Place the desired number of spacers through the strap and pass it through the buckle and around the handlebar.

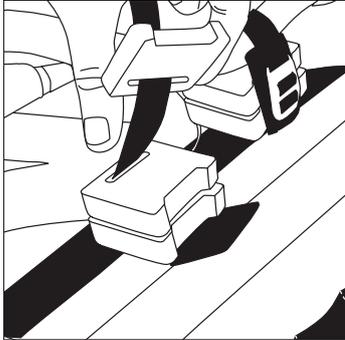


**2.**  
Pull the strap that the spacers rest snugly against the underside of the handlebar.

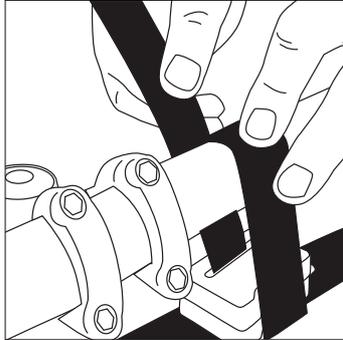


**3.**  
Pass the strap through the second buckle loop to lock. For proper clearance, adjust the position of the EVA spacers.

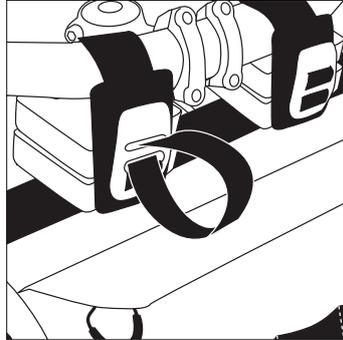


**4.**  
Check the strap length to avoid interference with your wheels (if you cut the strap, remember to burn the edge to avoid fraying).

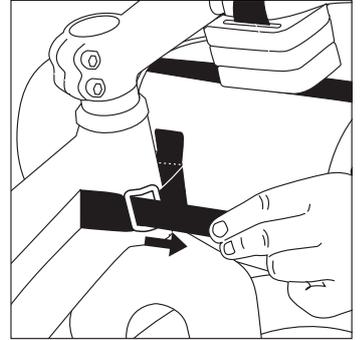

**5.**  
Use the central strap to secure the bag to the head tube, using extra EVA if needed.

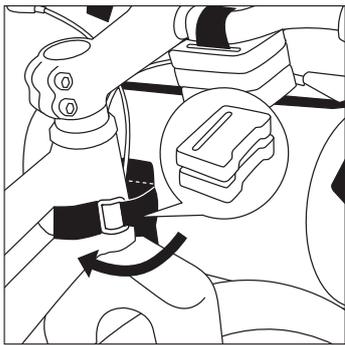

**6.**  
Check if the bag is securely seated.

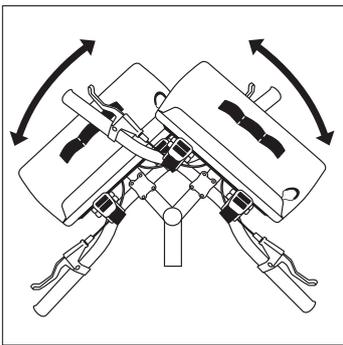

**7.**  
Your bag is now correctly installed.

